
# • ECO-Tracks



## 1. Cross member - Profile

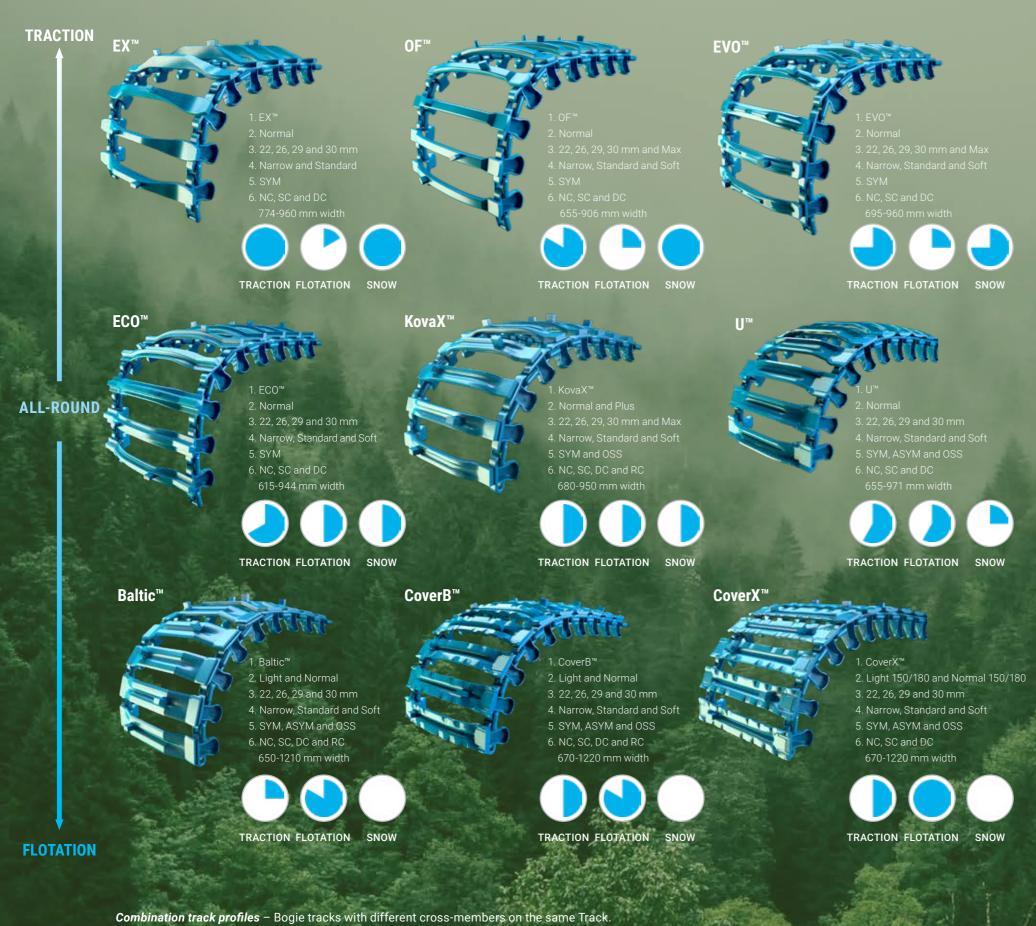

## 2. Cross member type - Light, Normal and Plus

Cross member thicknesss. Applicable for certain track types:

**Light**: Lighter cross members for forwarders with a load capacity up to 12 ton or harvesters with a machine weight up to 15 ton.

**Normal**: Standard size cross members for forwarders with a load capacity between 12-20 ton or harvesters with a machine weight up to 25 ton.

**Plus**: A stronger cross member for forwarders with a load capacity between 15-20 tons. For forwarders with payloads exceeding 20 tons, please consult with your Olofsfors dealer.

## 3. Link system

22 - 26 - 29 - 30 and Max



## 4. Version



#### 5. Position



 
## 6. Cleat

NC = No Cleat

SC = Single Cleat

DC = Double Cleat

RC = Road Cleat



Contact your local Olofsfors office to request other options and/or dimensions.