

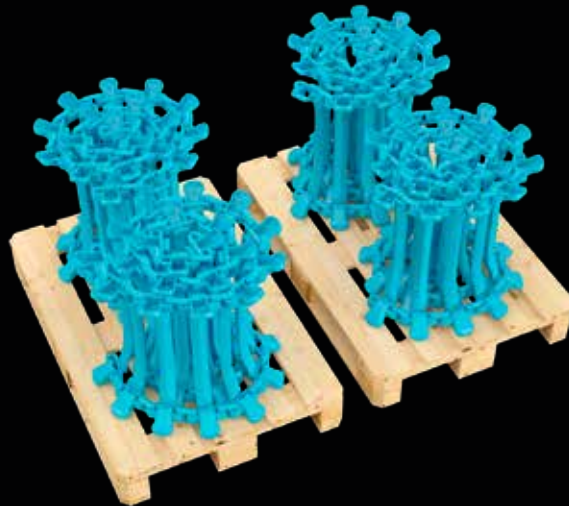


# MOUNTING INSTRUCTION

**THE TRACKS ARE DELIVERED IN FOUR ROLLS**

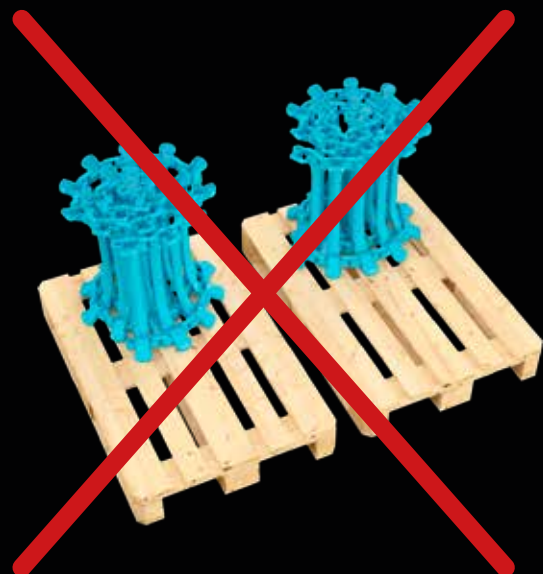

**ALWAYS PUT TOGETHER TRACKS FROM THE SAME PALLET**

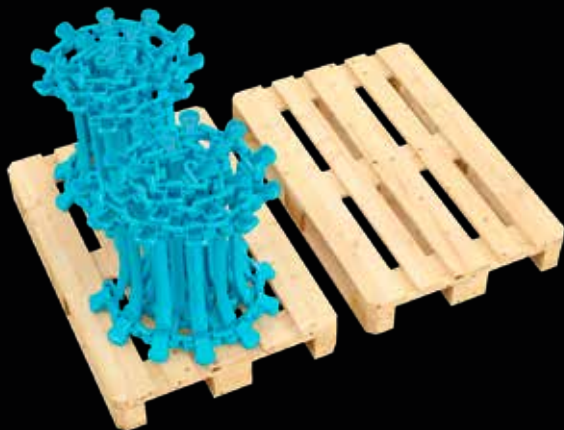

# REMEMBER!

**CHECK THE SERIAL NUMBER AGAINST  
ATTACHED DOCUMENTS**



**SAVE THE GUARANTEE CERTIFICATE**




**NOTE! THE TOOLS ARE PURCHASED SEPARATELY!**



**MANUAL**




**GEARED**

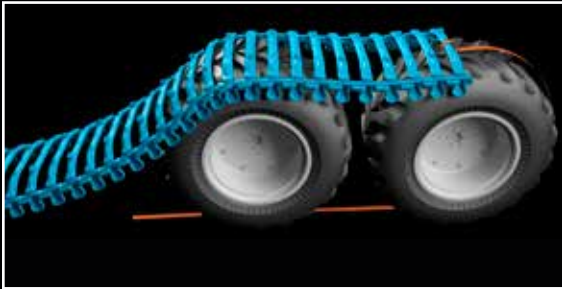


**1**  
Unroll the track parts and screw them together with large track lock. Drive over the track on the bogie using straps/small chain.



**2**  
When the track is on the bogie make sure that the ends are at one end of the bogie.

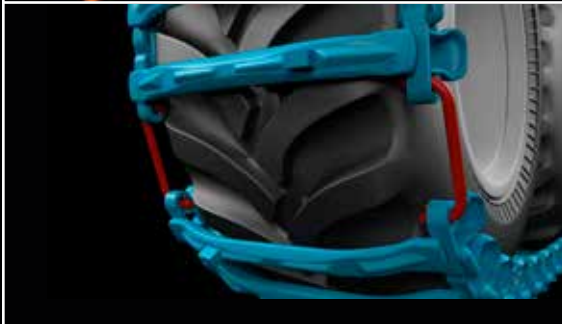


**3**  
Mount the two clamps from the outside into the link hooks.

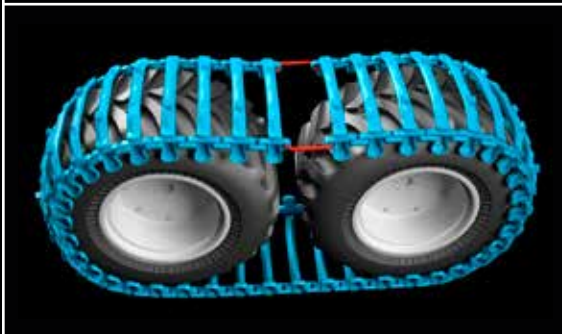


**4**  
Drive slowly forward until the clamps are between the bogie wheels. **NOTE:** If the tires are new, it helps mount significantly, if you moistens them. It may also be needed to help push up the track from the short edge towards the top.



**5**  
Mounting tool – tensioner – with screw.

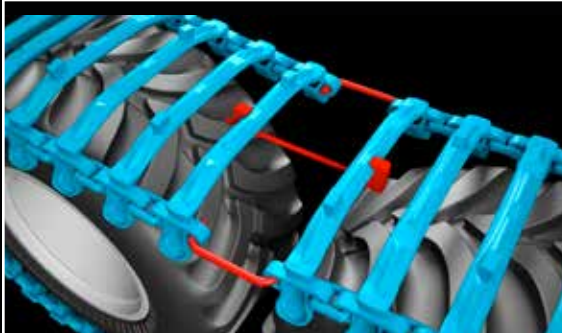

**6**  
Mount the installation tool on the cross members from below. Make sure that it is in the middle. Then use a ratchet shaft screwing together the stretcher with. Don't pull harder than necessary. Pay attention so as not the cross member turns.

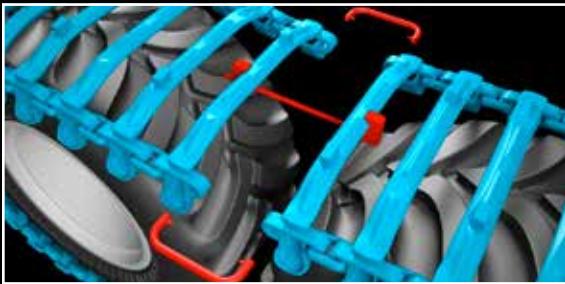

**7**  
When the clamps are loose, remove them from the track.



**8**  
Tighten the track until you can install the track lock.



**9**  
Mount the track lock plate.



**10**  
Mount the bolt from above because of the risk of damage the nut during driving.



**11**  
Take out the tool. The proper tensioning of the track is when slack between tires is max. 50 mm.

Part.no	Track Model
035-468510	ECO-TRACK
035-468511	ECO-OF
035-468512	ECO-L
035-468513	ECO-U & WIDE
035-468514	ECO-BALTIC
035-468515	ECO-PRO
035-468518	ECO-EVO
035-490460	ECO-EXW
035-490740	ECO-EX



**NOTE!** THE TOOLS ARE PURCHASED SEPARATELY.